

SSD UPS



Quick Start Guide

V. 1.0



Hardware & Software Engineering

INDEX

1	INTRODUCTION	3
2	HARDWARE INSTALLATION	3
3	SOFTWARE INSTALLATION	3
4	USING SSD-UPS	3
5	SYSTEM ERROR	3
6	TECHNICAL SUPPORT	3

1 INTRODUCTION

This guide is intended to assist the user in using the SSD-UPS unit.

2 HARDWARE INSTALLATION

- Connect direct power supply voltage (18/30 Vdc) to the input connector.
- Connect one end of the USB cable to the USB socket of the unit and the other end to the USB socket of the PC.
- Connect the PC power supply cable to the output connector.

Power up the device. Verify that the green LED (POWER) is on. You can turn on the PC.

3 SOFTWARE INSTALLATION

Insert the CD in the PC and start the installation program.

Reboot the system.

When the system reboots verify that the program icon is green.

4 USING SSD-UPS

When main power fails, the device automatically switches to the battery. The yellow LED (BACKUP) lights up. The software icon becomes red.

After 5 seconds from main power failure, the software starts windows shutdown.

After turning off the PC, SSD-UPS turns itself off.

When main power comes back, SSD-UPS turns on and charges the battery.

5 SYSTEM ERROR

If the red LED (BATTERY FAIL) is on, SSD-UPS can't charge the battery. Replace the battery with a new one.

6 TECHNICAL SUPPORT

MG Hardware & Software Engineering

Email: mg@mg-eng.com

Web: <http://www.mg-eng.com>

Tel. +39 0337 376568

Fax. +39 0331 379549